

1/1

FIG. 1A

DESIGN-EXPERT Plot

Overlay Plot

• Design Points

X1 = PC

X2 = PCCD

X3 = PCT

Actual Factor

D = PCT

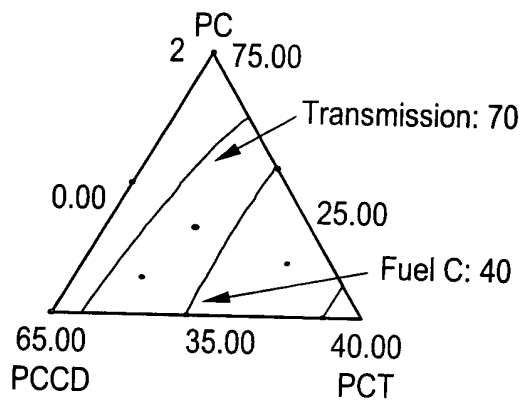


FIG. 1B

DESIGN-EXPERT Plot

Overlay Plot

• Design Points

X1 = PC

X2 = PCCD

X3 = PCT

Actual Factor

D = PCTG

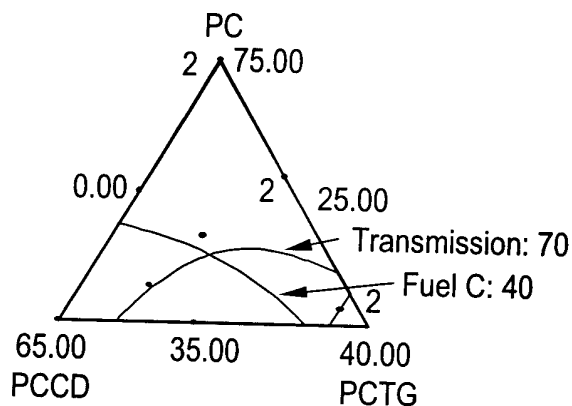


FIG. 1C

DESIGN-EXPERT Plot

Overlay Plot

• Design Points

X1 = PC

X2 = PCCD

X3 = PCT

Actual Factor

D = PCTA

